



www.disto.com


User Manual:

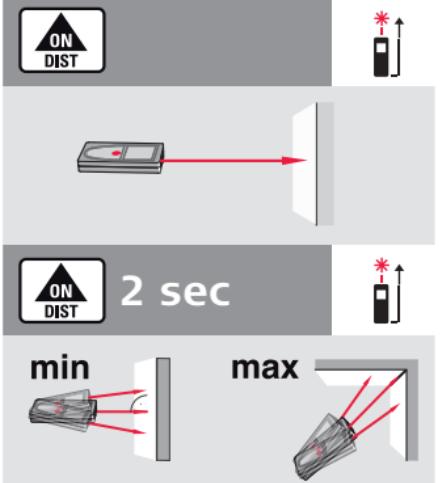


→ ON
 → OFF
2 sec

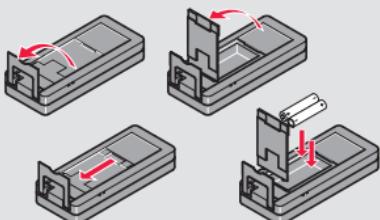

- 1 Status bar/level
- 2 Reference
- 3 Main line (result)
- 4 Active function
- 5 Selection keys linked to the symbol above
- 6 ON/DIST
- 7 Clear/OFF
- 8 Function screen
- 9 Memory
- 10 Add
- 11 Subtract
- 12 Reference
- 13 Navigation

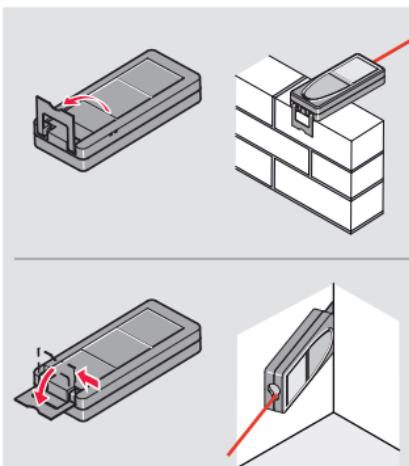


Unlock keypad

 

Within 2 sec.

Quick Start
Leica DISTO™ X3

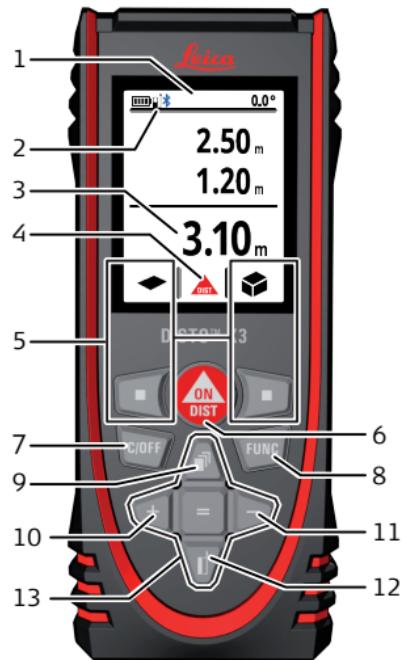


- when it has to be right

leica
Geosystems

FUNC

Functions

FUNC

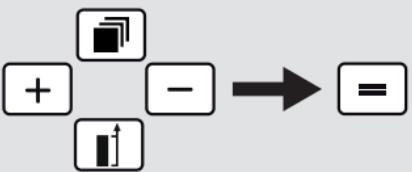

	Single distance measurement
	Area
	Volume
	Room angle
	Smart Horizontal Mode
	Level
	Pythagoras
	Stake out
	Timer
	Point to point measurement*
	Point to point measurement levelled*
	Smart area measurement*

*Activated when connected to DST 360

FUNC

Settings

	Tilt units
	Distance units
	Turning screen
	Beep
	Bluetooth®
	Bluetooth® settings
	Illumination
	Favourites
	Keypad lock
	Tilt calibration
	Information / Serial number
	Offset
	Calibration of DST 360*
	Reset

FUNC

or



	1 / 20
	5.239m
	6.305m
	2.883m
	95.230m ³

--	--



Details

Clear memory

Take over value

Details